



! WARNING: ALWAYS ASSUME THE HIGH VOLTAGE SYSTEM IS POWERED UP



High Voltage Device



High Voltage Motor


MSD = Manual Service Disconnect



High Voltage Cables




12V Voltage Cables

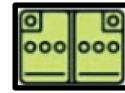

12V Battery



Cutting Points

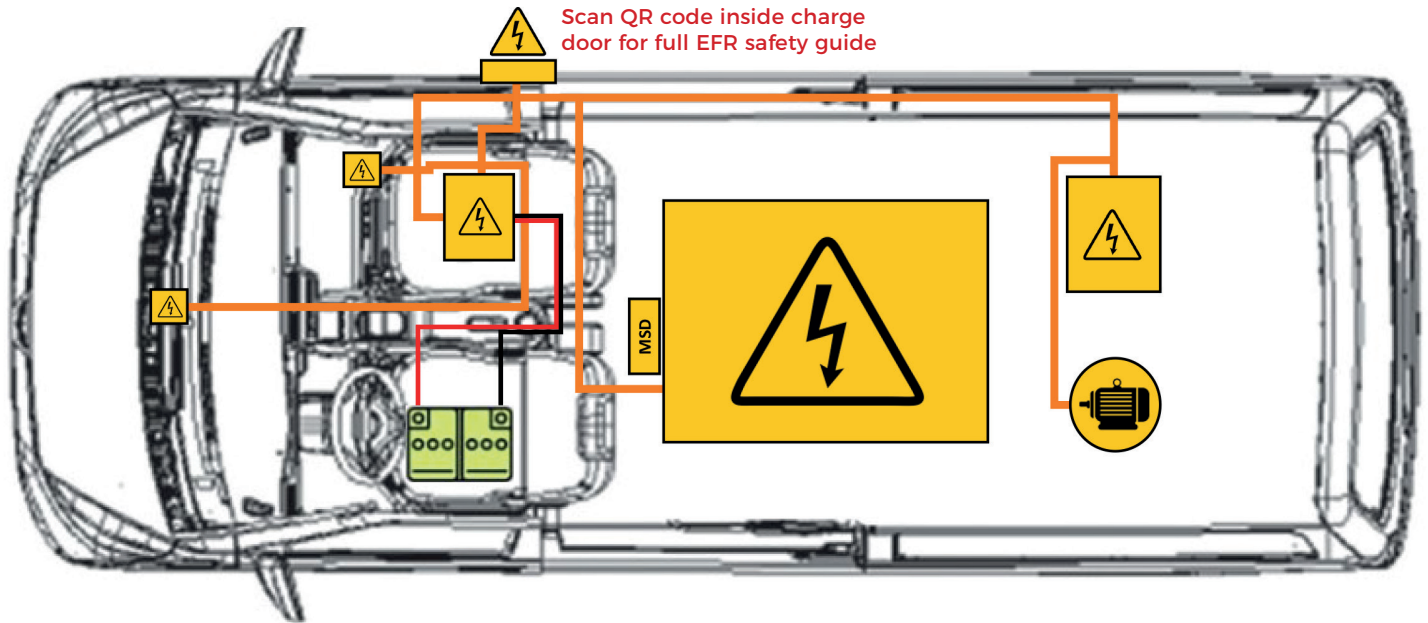

How to access and remove the MSD


Step 1:

Release (2) seat latches, then lean entire seat assembly backward. For units with a bulkhead, lean seatback forward first.




Step 3:

Remove the MSD. This is a finger actuated 2 stage lever.

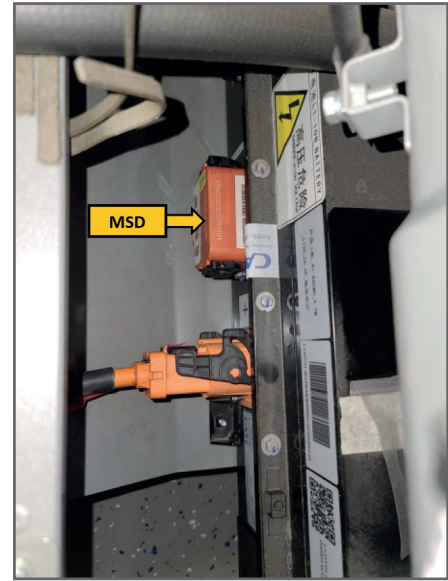

Step 2:

Cut power to the 12V system in locations shown below. Notice access to MSD.

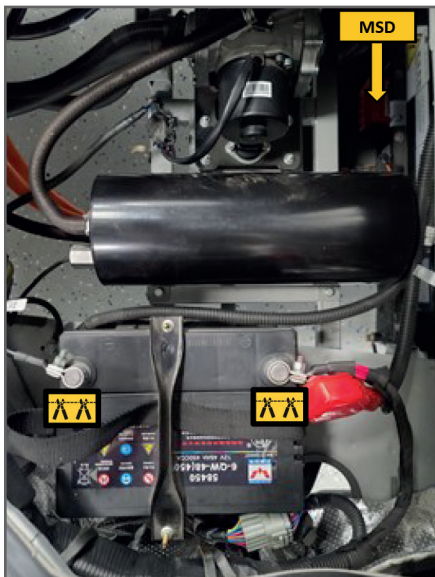

Unlocking Details:

On the bottom of MSD, pull out the orange trigger (A) on the black locking lever. Pull the black locking lever up to expose the release tab (B). Push the release tab in and remove the MSD.

